



国家高新技术企业
National high-tech enterprises

KRIPAL® 科瑞普电气 KRIPAL ELECTRICAL

Foreign Trade Department
Add: Daqiao Industrial Zone, Yueqing, Zhejiang
Tel:+86-577-62865155 62865157
Fax:+86-577-62887668
E-mail: tiemin@kripal.com
Http://www.kripal.com

为了您的安全，在操作带锁插座之前请使用开门手柄。
如需维修、停机或清洁插座时请勿忘记拔掉电源插头。
当插座损坏时，请勿使用，以免造成触电危险。
不要擅自拆卸插座！
任何维修和检查应由具备专业技能的人士处理。
For your safety please not use the lockable socket before opening.
When you need maintenance or cleaning, please unplug the power plug.
Do not disassemble the socket!
Any maintenance and inspection shall be performed by the personnel having expertise concerned.



Edition: KRIPAL Planning department Issued: 03,2019

KRIPAL®

www.kripal.com



科瑞普电气
KRIPAL ELECTRICAL

KRIPAL®

负荷隔离开关UKP 安装形式

Load isolation switch UKP Installation way

UKP0/L1	表面安装 总开关、维修开关 UKP0 10, 16, 20A Surface installation Main switch and maintenance switch UKP0 10, 16, 20A	
UKP1/L2	表面安装 总开关、维修开关 UKP1 20, 25, 32A Surface installation Main switch and maintenance switch UKP1 20, 25, 32A	
UKP3/L3	表面安装 总开关、维修开关 UKP3 32, 40, 50, 63A Surface installation Main switch and maintenance switch UKP3 32, 40, 50, 63A	
UKP5/L5	表面安装 总开关、维修开关 UKP5 63, 80, 100, 125, 150A Surface installation Main switch and maintenance switch UKP5 63, 80, 100A	

KRIPAL®

负荷隔离开关UKP 安装形式

Load isolation switch UKP Installation way

UKP0/EA/SVB	通-断开关UKP0···/EA/SVB 平齐安装式 10, 16, 20A On-off switch UKP0···/EA/SVB parallel and level installation 10, 16, 20A	
UKP1/EA/SVB	通-断开关UKP1···/EA/SVB 平齐安装式 20, 25, 32A On-off switch UKP1···/EA/SVB parallel and level installation 20, 25, 32A	
UKP3/EA/SVB	通-断开关UKP3···/EA/SVB 平齐安装式 32, 40, 50, 63A On-off switch UKP3···/EA/SVB parallel and level installation 32, 40, 50, 63A	
UKP5/EA/SVB	通-断开关UKP5···/EA/SVB 平齐安装式 63, 80, 100A On-off switch UKP5···/EA/SVB parallel and level installation 63, 80, 100A	
UKP0/V/SVB	通-断开关UKP0···/V/SVB 后部安装 10, 16, 20A On-off switch UKP0···/V/SVB Rear installation 10, 16, 20A	
UKP1/V/SVB	通-断开关UKP1···/V/SVB 后部安装 20, 25, 32A On-off switch UKP1···/V/SVB Rear installation 20, 25, 32A	
UKP3/V/SVB	通-断开关UKP3···/V/SVB 后部安装 32, 40, 50, 63A On-off switch UKP3···/V/SVB Rear installation 32, 40, 50, 63A	
UKP5/V/SVB	通-断开关UKP5···/V/SVB 后部安装 63, 80, 100, 125, 150A On-off switch UKP5···/V/SVB Rear installation 63, 80, 100A	



负荷隔离开关UKP 安装形式

Load isolation switch UKP Installation way

UKP0/IVS	通-断开关UKP0.../IVS 配电柜安装 10, 16, 20A On-off switch UKP0.../IVS Distribution Cabinet Installation 10, 16, 20A
	UKP0/Z
UKP1/IVS	通-断开关UKP1.../IVS 配电柜安装 20, 25, 32A On-off switch UKP 1.../IVS Distribution Cabinet Installation 20, 25, 32A
	UKP1/Z
UKP3/IVS	通-断开关UKP3.../IVS 配电柜安装 32, 40, 50, 63A On-off switch UKP3.../IVS Distribution Cabinet Installation 32, 40, 50, 63A
	UKP3/Z
UKP5/IVS	通-断开关UKP5.../IVS 配电柜安装 63, 80, 100A On-off switch UKP5.../IVS Distribution Cabinet Installation 63, 80, 100A
	UKP5/Z



凸轮开关UKT 安装形式

Cam switch UKT Installation way

UKT0/L2 	表面安装 转换UKT0 10, 16, 20A Surface installation Transfer UKT0 10, 16, 20A	UKTN0/L2 	表面安装 转换UKTN0 10, 16, 20A Surface installation Transfer UKTN0 10, 16, 20A
UKT3/L3 	表面安装 转换UKT3 20, 32, 40A Surface installation Transfer UKT3 20, 32, 40A	UKTN3/L3 	表面安装 转换UKTN3 20, 32, 40A Surface installation Transfer UKTN3 20, 32, 40A
UKT5/L5 	表面安装 转换UKT5 63, 80, 100A Surface installation Transfer UKT5 63, 80, 100A	UKTN5/L5 	表面安装 转换UKTN5 63, 80, 100A Surface installation Transfer UKTN5 63, 80, 100A

KRIPAL®

凸轮开关UKT, 安装形式

Cam switch UKT Installation way

UKT0/E	转换开关UKT0.../E 平齐安装式 10, 16, 20A Transfer switch UKT0.../E parallel and level installation 10, 16, 20A	UKT0/IVS	用于二个旋转方向 星 - 三角开关UKT0.../IVS 配电柜安装 10, 16, 20A Used for two rotation directions Star-delta switch UKT0.../IVS Distribution Cabinet Installation 10, 16, 20A
UKT3/E	转换开关UKT3.../E 平齐安装式 25, 32, 40A Transfer switch UKT3.../E parallel and level installation 25, 32, 40A	UKT0/IVS	用于二个旋转方向 星 - 三角开关UKT0.../IVS 配电柜安装 25, 32, 40A Used for two rotation directions Star-delta switch UKT0.../IVS Distribution Cabinet Installation 25, 32, 40A
UKT0/E	转换开关UKT0.../E 平齐安装式 10, 16, 20A Transfer switch UKT0.../E parallel and level installation 10, 16, 20A	UKT0/Z	双向弹簧复位至0 UKT0.../Z 后部安装 10, 16, 20A Double-acting spring resets to 0 UKT0.../Z Rear installation 10, 16, 20A
UKT3/E	转换开关UKT3.../E 平齐安装式 25, 32, 40A Transfer switch UKT3.../E parallel and level installation 25, 32, 40A	UKT0/EZ	步进开关 UKT0.../EZ 后部安装 10, 16, 20A Stepping switch UKT0.../EZ Rear installation 10, 16, 20A

KRIPAL®

凸轮开关UKT, 安装形式

Cam switch UKT Installation way

UKT0/E	双向360°旋转 UKT0.../E 平齐安装式 10, 16, 20A Bi-direction rotating in 360° Measure current UKT0.../E parallel and level installation 10, 16, 20A	UKT0/EZ	双向360°旋转 UKT0.../EZ 后部安装 10, 16, 20A Bi-direction rotating in 360° Measure current UKT0.../EZ Rear installation 10, 16, 20A
UKT3/E	多速开关UKT3.../E 平齐安装式 25, 32, 40A Multi-speed switch UKT3.../E parallel and level installation 25, 32, 40A	UKT3/EZ	从手动位置(START)弹簧复位 至手动位置(HAND) UKT3.../EZ 后部安装 25, 32, 40A The spring resets to HAND position from START position UKT3.../EZ Rear installation 25, 32, 40A
UKT0/E	多速开关UKT0.../E 平齐安装式 10, 16, 20A Multi-speed switch UKT0.../E parallel and level installation 10, 16, 20A	UKT0/EZ	电压表选择开关 UKT0.../EZ 后部安装 10, 16, 20A Voltmeter selector switch UKT0.../EZ Rear installation 10, 16, 20A
UKT5	星 - 三角开关UKT5 63, 80, 100A Star-delta switch UKT5 63, 80, 100A	UKT5	换向开关UKT5 63, 80, 100A Commutation switch UKT5 63, 80, 100A



凸轮开关UKT 安装形式

Cam switch UKT Installation way

UKT0/E	双向360°旋转 UKT0.../E 平齐安装式 10, 16, 20A Bi-direction rotating in 360° Measure current UKT0.../E parallel and level installation 10, 16, 20A	UKT0/E	手/自动开关 UKT0.../E 平齐安装式 10, 16, 20A Manual/auto switch UKT0.../E parallel and level installation 10, 16, 20A
UKT3/E	从手动位置(HAND)弹簧复位 至0 UKT3.../E 平齐安装式 25, 32, 40A The spring resets to 0 from HAND position UKT3.../E parallel and level installation 25, 32, 40A	UKT5ZAV	换向开关UKT5...ZAV 63, 80, 100A Commutation switch UKT5...ZAV 63, 80, 100A
UKT0/IVS	转换开关UKT0.../IVS 配电柜安装 10, 16, 20A Transfer switch UKT0.../IVS Distribution Cabinet Installation 10, 16, 20A	UKT0/EZ	转换开关UKT0.../EZ 后部安装 10, 16, 20A Transfer switch UKT0.../EZ Rear installation 10, 16, 20A
UKT3/IVS	转换开关UKT3.../IVS 配电柜安装 25, 32, 40A Transfer switch UKT3.../IVS Distribution Cabinet Installation 25, 32, 40A	UKT3/EZ	转换开关UKT3.../EZ 后部安装 25, 32, 40A Transfer switch UKT3.../EZ Rear installation 25, 32, 40A




凸轮开关UKT 系列一览

Cam switch UKT General chart of system



控制开关 UKT0, UKT3, UKT5

Control switch UKT0, UKT3, UKT5

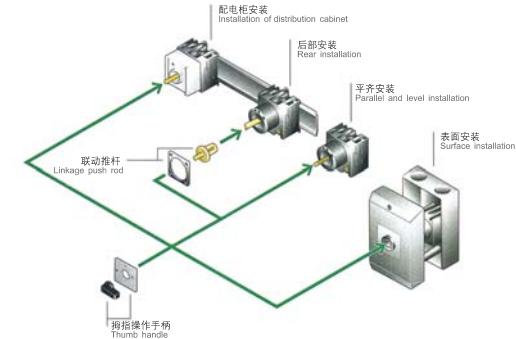

KRIPAL®

凸轮开关UKT 控制开关: 通断开关、转换开关

Cam switch UKT Control switch: On-off switch, supply transfer switch


电路图 Circuit diagram	徽牌 Emblem	极数 Pole	基本类型 Basic type 在...处插入 ...处安装 安装形式代码 Code of installation way	平齐安装 Parallel and level installation	中心安装 Central installation	表面安装 Surface installation	配电柜 Installation of distributor cabinet	后部安装 Rear installation
---------------------------	--------------	------------	--	--	---------------------------------	---------------------------------	--	------------------------------

通断开关 黑色手柄和灰色徽牌 On-off switch Black handle and gray emblem

	1	UKT0-1-15401/...	E	EZ	I1	IVS	Z
	1	UKT0-1-15402/...	E	EZ	I1	IVS	Z
	2	UKT0-2-15403/...	E	EZ	I1	IVS	Z
	2	UKT0-2-15404/...	E	EZ	I1	IVS	Z

转换开关 黑色手柄和灰色徽牌 Transfer switch Black handle and gray emblem

	1	UKT0-1-15421/...	E	EZ	I1	IVS	Z
	2	UKT0-2-15422/...	E	EZ	I1	IVS	Z
	3	UKT0-3-15423/...	E	EZ	I1	IVS	Z

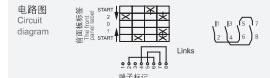

从0切换到1 Switch from 0 to 1	从1切换到 START Switch from 1 to START	从1切换到0 Switch from 1 to 0	从1切换到0 Switch from 1 to 0
触点 1-2 开 1-2 open contact	自动返回1 Automatic return 1	触点 1-2 开 1-2 open contact	触点 1-2 开 1-2 open contact
触点 1-3 闭 1-3 closed contact	触点 1-2 闭 1-2 closed contact	触点 3-4 开 3-4 open contact	触点 3-4 闭 3-4 closed contact
触点 5-6 开 5-6 open contact	触点 5-6 闭 5-6 closed contact	触点 5-6 开 5-6 open contact	触点 5-6 闭 5-6 closed contact
触点 7-8 闭 7-8 closure contact	触点 7-8 保持闭 7-8 stays closure contact	触点 7-8 闭 7-8 closure contact	触点 7-8 闭 7-8 closure contact
从0切换到1 Switch from 0 to 1	从2切换到 START Switch from 2 to START	从2切换到0 Switch from 2 to 0	从2切换到0 Switch from 2 to 0
触点 1-2 闭 1-2 closure contact	自动返回2 Automatic return 2	触点 1-2 开 1-2 open contact	触点 1-2 开 1-2 open contact
触点 3-4 开 3-4 open contact	触点 1-2 闭 1-2 closed contact	触点 3-4 闭 3-4 closed contact	触点 3-4 闭 3-4 closed contact
触点 5-6 闭 5-6 closure contact	触点 5-6 闭 5-6 closed contact	触点 5-6 闭 5-6 closed contact	触点 5-6 闭 5-6 closed contact
触点 7-8 闭 7-8 closure contact	触点 5-6 闭, 延时断开 5-6 closure contact, cut in advance	触点 7-8 闭, 延时断开 7-8 closure contact, Off delay	触点 7-8 闭 7-8 closure contact

KRIPAL®

凸轮开关UKT 控制开关: 手动/自动开关

Cam switch UKT Control switch: Manual/auto switch

电路图 Circuit diagram	徽牌 Emblem	极数 Pole	基本类型 Basic type 在...处插入 ...处安装 安装形式代码 Code of installation way	平齐安装 Parallel and level installation	中心安装 Central installation	表面安装 Surface installation	配电柜 Installation of distributor cabinet	后部安装 Rear installation
---------------------------	--------------	------------	--	--	---------------------------------	---------------------------------	--	------------------------------

手动/自动开关 前部 IP65 Manual/auto switch Fore IP65

带0(off)位置 With 0 (Off) position

	1	UKT0-1-15431/...	E	EZ	I1	IVS	Z
	2	UKT0-2-15432/...	E	EZ	I1	IVS	Z
	3	UKT0-3-15433/...	E	EZ	I1	IVS	Z

从手动位置(HAND)弹簧复位至0 The spring resets to 0 from HAND position

	1	UKT0-1-15434/...	E	EZ	I1	IVS	Z
	2	UKT0-2-15435/...	E	EZ	I1	IVS	Z

从手动位置(MANLAKIS)弹簧复位至手动位置(HAND) The spring resets to HAND position from MANLAKIS position

	2	UKT0-2-15907/...	E	EZ	I1	IVS	Z
--	---	------------------	---	----	----	-----	---

无0(OFF)位置Without 0 (Off) position

	1	UKT0-1-15435/...	E	EZ	I1	IVS	Z
	2	UKT0-2-15432/...	E	EZ	I1	IVS	Z
	3	UKT0-3-15433/...	E	EZ	I1	IVS	Z

说明 Note

- 适用于控制电子设备
- 额定持续电流 20A
- 额定工作电压 220-240V
- 额定工作电流 6A
- I_u Rated continuous current 20A
- I_e Rated working voltage 220-240V
- I_e Rated working current 6A
- AC-15 380-415V 4A
- AC-21A 12A
- DC-13 每个触点32V 10A
- DC-13 Each contact 32V 10A

凸轮开关UKT、负荷隔离开关UKP 主要备件和附件		
Description	应用于 Application	型号 Model
	总开关手柄装置 Main switch handle UKT0...带 2/8...触点 T3 提供了 8 触点或最多 12 触点。UKT3...带 12...触点 T3 提供了 12 触点或最多 16 触点。	SVB-UKT0
红色手柄加黄色锁圈, 可加挂锁 With red handle and yellow lock ring, can be equipped with padlock	UKT0...-IE...-IZ...-I1 UKT3...-IE...-IZ...-I2 UKT1...-IE...-IZ...-I2 UKT5...-IE...-IZ...-I4 UKP5-63E...-IZ...-I4 UKP5-100E...-IZ...-I5	SVB-UKP3
黑色手柄加黑色锁圈, 可加挂锁 With black handle and black locking ring, can be equipped with padlock in the position 0.	UKT0...-IE...-IZ...-I1 UKT3...-IE...-IZ...-I2 UKT1...-IE...-IZ...-I2 UKT5...-IE...-IZ...-I4 UKP5-63E...-IZ...-I4 UKP5-100E...-IZ...-I5	SVB-SW-UKT0
总开关手柄装置 Main switch handle 带PE连接端和KNS连接端 With PE connecting terminal and N connecting terminal	UKT0...-IE...-IZ...-I1 UKT3...-IE...-IZ...-I2 UKT1...-IE...-IZ...-I2 UKT5...-IE...-IZ...-I4 UKP5-63E...-IZ...-I4 UKP5-100E...-IZ...-I5	SVB-SW-UKP3
平行安装和水平安装方式 For transferring the installation way 1) 前部安装开关 T...-IE...-前面板安装式总开关UKT...-IE/SVb(带微动FS908) Rear installation type switch T...-IE-Rear installation type main switch.../SVb (with emblem Fs908)	UKT0...-IE...-IZ...-I1 UKT3...-IE...-IZ...-I2 UKT1...-IE...-IZ...-I2 UKT5...-IE...-IZ...-I4 UKP5-63E...-IZ...-I4 UKP5-100E...-IZ...-I5	辅助触点模块 Auxiliary contact module 1常开+1常闭触点 1 NO contact +1 NC contact
护罩 Shield 用于平行安装式开关, 多8个触点 1) 平行安装开关 T...-IE...-前面板安装式总开关UKT...-IE/SVb(带微动FS908) Rear installation type switch T...-IE-Rear installation type main switch.../SVb (with emblem Fs908)	UKT0...-IE...-IZ...-I1 UKT3...-IE...-IZ...-I2 UKT1...-IE...-IZ...-I2 UKT5...-IE...-IZ...-I4 UKP5-63E...-IZ...-I4 UKP5-100E...-IZ...-I5	+H11-UKP1/ UKP5-E +H11-UKP1/ UKP5-Z UKP5-100E...-IZ...-I4...-S1...-S2...-S3...-S4...-S5...-S6...-S7...-S8
红色手柄加黄色锁圈, 可加挂锁 With red handle and yellow lock ring, can be equipped with padlock	UKT0...-IE...-IZ UKT3...-IE...-IZ	VIA/SVB-UKT0
黑色手柄加黑色锁圈, 可加挂锁 With black handle and black locking ring, can be equipped with padlock	UKT0...-IE...-IZ UKT3...-IE...-IZ	VIA/SVB-SW-UKT0
拇指操作手柄 Thumb handle	UKT0...-IE...-IZ UKT3...-IE...-IZ	VIA/SVB-UKP5
红Red	UKT0...-IE...-IZ...-S1 UKT3...-IE...-IZ...-I2 UKP5-63E...-IZ...-I2	KNB-RT-UKT0
黑Black	UKT0...-IE...-IZ...-I2...-I11 UKT3...-IE...-IZ...-I2...-I12 UKP5-63E...-IZ...-I2	KNB-UKT0
Red Red	UKT5...-IE...-IZ...-I4 UKP5-63E...-IZ...-I4 UKP5-100E...-IZ...-I5	KNB-RT-UKP5
Black Black	UKT5...-IE...-IZ...-I4 UKP5-63E...-IZ...-I4 UKP5-100E...-IZ...-I5	KNB-UKP5

安装尺寸		
Mounting size		
UKP0...-JL1... UKT0...-JL1...	N8触点N pole module N-UKP1分断容量=UKP1-32触点的分断容量 N-UKP1 opening capacity= UKP1-32 contact opening capacity N-UKP1触点容量=UKP1-100触点的分断容量 N-UKP1 opening capacity= UKP1-100 contact opening capacity	UKP0...-JL1... UKT0...-JL1...
表面安装 Surface installation	开孔尺寸 Hole size	表面安装 Surface installation
UKP1...-JL2... UKT0...-JL2...	UKP0...-JL2... UKT0...-JL2...	UKPN0...-JL2... UKTN0...-JL2...
表面安装 Surface installation	开孔尺寸 Hole size	表面安装 Surface installation
UKP3...-JL3... UKT3...-JL3...	UKP3...-JL3... UKT3...-JL3...	UKPN3...-JL3... UKTN3...-JL3...
表面安装 Surface installation	开孔尺寸 Hole size	表面安装 Surface installation
UKP5...-JL4... UKT5...-JL4...	UKP5...-JL4... UKT5...-JL4...	UKPN5...-JL4... UKTN5...-JL4...
表面安装 Surface installation	开孔尺寸 Hole size	表面安装 Surface installation
UKP14...-JL4... UKT14...-JL4...	UKP14...-JL4... UKT14...-JL4...	UKPN5...-JL4... UKTN5...-JL4...
表面安装 Surface installation	开孔尺寸 Hole size	表面安装 Surface installation

KRIPAL®

光伏直流隔离开关

DC-Switch Disconnectors



额定值 Rating

面板安装 -- 四孔安装 Panel mounting Four-hole mounting	单孔安装 Single hole mounting Φ22.5mm IP66	后部安装 Base mounting w. Door coupling IP66	组合开关 Modular switch IP40*
--	---	---	---------------------------------

额定电流 Rated current

型号 A open DC21B
Type A open DC21B
(DC-PV1)
at Ue
4poles in
series



UKPD32-16 16 16 1000

.. E Z(O) VZV SMA ..

UKPD32-25 25 25 1000

.. E Z(O) VZV SMA ..

额定值 Rating

面板安装--四孔安装 Panel mounting Four-hole mounting IP66*	单孔安装 Single hole mounting Φ22.5mm IP66*	后部安装 Base mounting w. Door coupling IP66*	组合开关 Modular switch IP40*	塑料盒 Plastic enclosed IP66/67*
---	--	--	---------------------------------	-------------------------------------

额定电流 Rated current

型号 A open DC21B
Type A open DC21B
(DC-PV1)
at Ue
4poles in
series



UKPD32-16 16 16 1000

.. EH4 Z(O)H1 VZVH4 SMAH1 PFLH4 ..

UKPD32-25 25 25 1000

.. EH4 Z(O)H1 VZVH4 SMAH1 PFLH4 ..

UKPD32-32 32 32 1000



.. EH4 Z(O)H1 VZVH4 SMAH1 PFLH4 ..

KRIPAL®


光伏直流隔离开关

DC-Switch Disconnectors

型号 Type	2极并联 2+2-pole 2poles in series +2 poles parallel	4极 4-pole	4极跳线 输入上面, 输出底部 4-pole with jumpers input on top output bottom	4极跳线 输入和输出底部 4-pole with jumpers input and output bottom	4极跳线 输入和输出上 4-pole with jumpers input and output on top
UKPD32-16 UKPD32-25 UKPD32-32	...A2+2 ...A2+2 ...A2+2	.A4(xA2) .A4(2xA2) .A4(2xA2)	.A4B .A4B .A4B	.A4O .A4O .A4O	.A4U .A4U .A4U

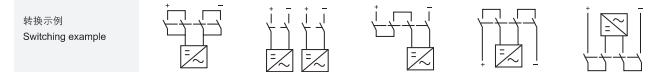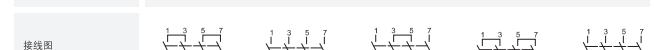

型号 Type	6极 6-pole	3 + 2极串联3极 3+2-pole 3 poles in series +2 poles parallel	8极 8-pole	4 + 2极串联3极 4+2-pole 3 poles in series +2 poles parallel
UKPD32-16 UKPD32-25 UKPD32-32	... A6 ... A6 ... A6	.A3+2 .A3+2 .A3+2	... A8 ... A8 ... A8	.A4+2 .A4+2 .A4+2

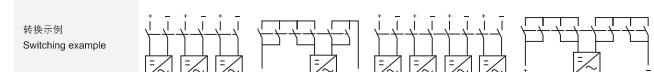

KRIPAL

UKG1开关

UKG1 Switch


面板 Faceplate	手柄款式 Rotary Type	颜色 Color	面板 Faceplate
			K1 K2 K3 K4
K1		黑色 Black 白色 White 红色 Red 黄色 Yellow	<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
K2		黑色 Black 白色 White 红色 Red 黄色 Yellow	<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
K3		黑色 Black 白色 White 红色 Red 黄色 Yellow	<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
K4		黑色 Black 白色 White 红色 Red 黄色 Yellow	<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>

41

KRIPAL®

UKG2开关

UKG2 Switch

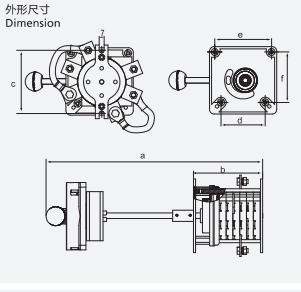产品外观 Photo	外型尺寸 Dimension	
		
电流(A) Current(A)	额定工作电压(V) Rated operating voltage (V)	
开关 Switch	订货号 Model	
63	110-1000	UKG2-63
125	110-1000	UKG2-125
250	110-1000	UKG2-250
造型 Description		
参数 Parameter	框架 Frame	
	UKG2-63	UKG2-250
尺寸 Dimension(mm)	a 308 b 100 c 90 d 70 e 80 f 75.5	a 353 b 226 c 90 d 70 e 80 f 75.5
太阳能光伏专用 Solar photovoltaic dedicated		

42

KRIPAL®


UKPM开关

UKPM Switch

产品外观
Photo



外形尺寸
Dimension

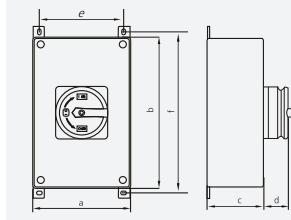

	电流(A) Current(A)	额定工作电压(V) Rated operating voltage (V)	订货号 Model
			3P 4P
◆ IP 65 开关、不锈钢外壳 ◆ IP65 Switch: stainless steel enclosure			
10	230-440	UKPM1-310	UKPM1-410
16	230-440	UKPM1-316	UKPM1-416
20	230-440	UKPM1-320	UKPM1-420
25	230-440	UKPM1-325	UKPM1-425
32	230-440	UKPM3-332	UKPM3-432
40	230-440	UKPM3-340	UKPM3-440
50	230-440	UKPM3-350	UKPM3-450
63	230-440	UKPM3-363	UKPM3-463
80	230-440	UKPM5-363	UKPM5-463
100	230-440	UKPM5-380	UKPM5-480
125	230-440	UKPM5-3100	UKPM5-4100
150	230-440	UKPM5-3125	UKPM5-4125
		UKPM5-3150	UKPM5-4150

参数 Parameter	框架 Frame	UKPM1			UKPM3			UKPM5		
		a	b	c	a	b	c	a	b	c
尺寸 Dimension(mm)		120	160	160	120	160	200	120	160	200
	a	120	160	160	120	160	200	120	160	200
	b	100	260	260	101	261	266	101	261	266
	c	86	101	116	86	101	116	86	101	116
	d	35	35	44	35	35	44	35	35	44
	e	100	140	140	100	140	140	100	140	140
	f	160	280	280	160	280	280	160	280	280

KRIPAL®


UKPS开关

UKPS Switch

产品外观
Photo



外形尺寸
Dimension

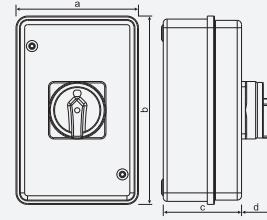

	电流(A) Current(A)	额定工作电压(V) Rated operating voltage (V)	订货号 Model
			3P 4P
◆ IP65 开关、不锈钢外壳 ◆ IP65 Switch: stainless steel enclosure			
10	230-440	UKPS1-320	UKPS1-420
16	230-440	UKPS1-325	UKPS1-425
20	230-440	UKPS1-332	UKPS1-432
32	230-440	UKPS3-332	UKPS3-432
40	230-440	UKPS3-340	UKPS3-440
50	230-440	UKPS3-350	UKPS3-450
63	230-440	UKPS3-363	UKPS3-463
80	230-440	UKPS5-363	UKPS5-463
100	230-440	UKPS5-380	UKPS5-480
125	230-440	UKPS5-3100	UKPS5-4100
150	230-440	UKPS5-3125	UKPS5-4125
		UKPS5-3150	UKPS5-4150

参数 Parameter	框架 Frame	UKPS1			UKPS3			UKPS5		
		a	b	c	a	b	c	a	b	c
尺寸 Dimension(mm)		111	144	220	111	144	220	111	144	220
	a	111	144	220	111	144	220	111	144	220
	b	101	147	217	85	95	108	85	95	108
	c	86	101	116	86	101	116	86	101	116
	d	37	37	43	37	37	43	37	37	43

符合德国工业标准 DIN VDE 0623, 欧洲/国际标准 EN/IEC 60309-2
German industrial standard: DIN VDE 0623, European / International standard: EN / IEC 60309-2